 
 


cleaning & washing

DWD0400

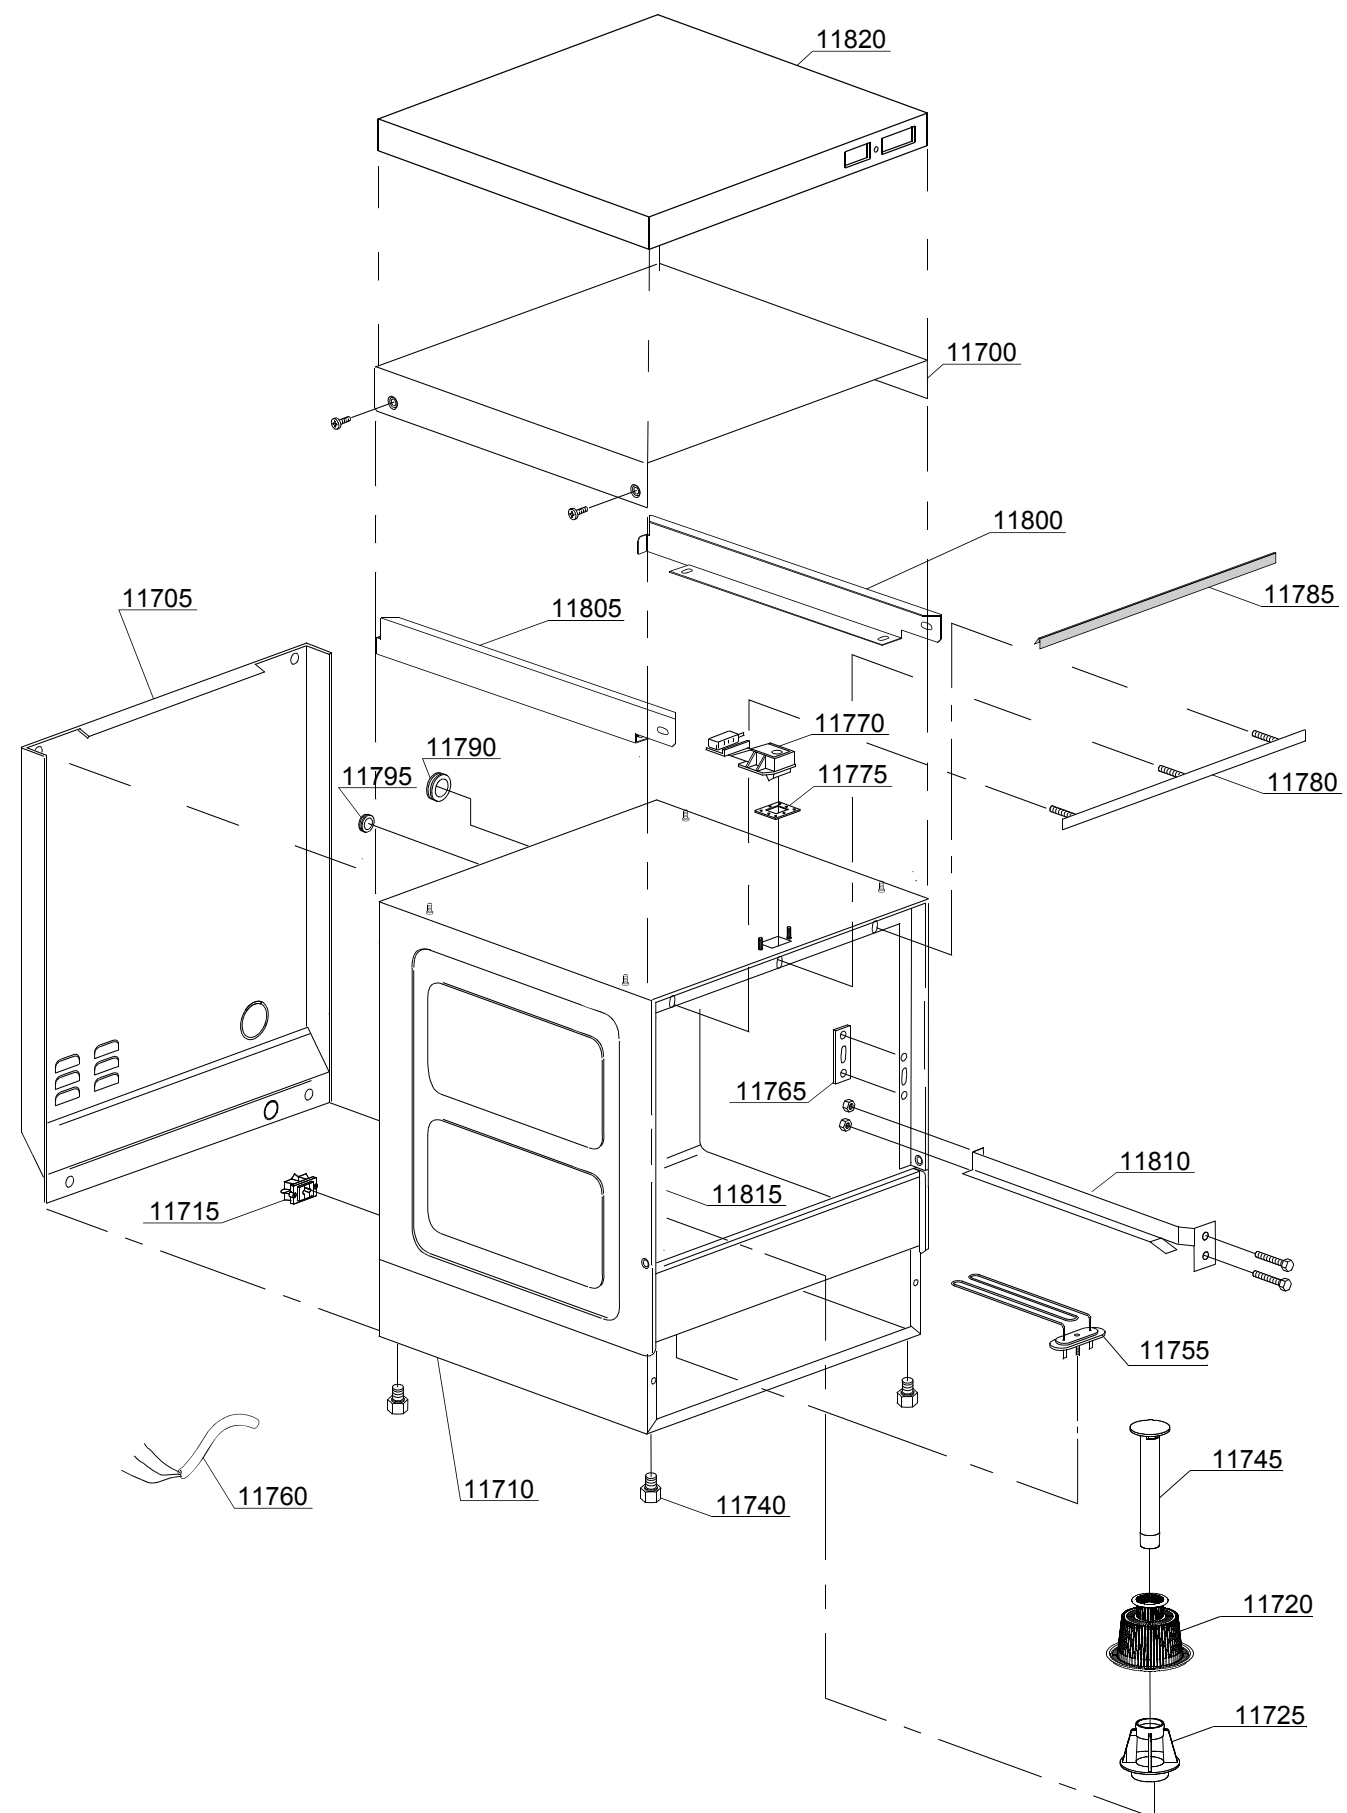

DWD0400


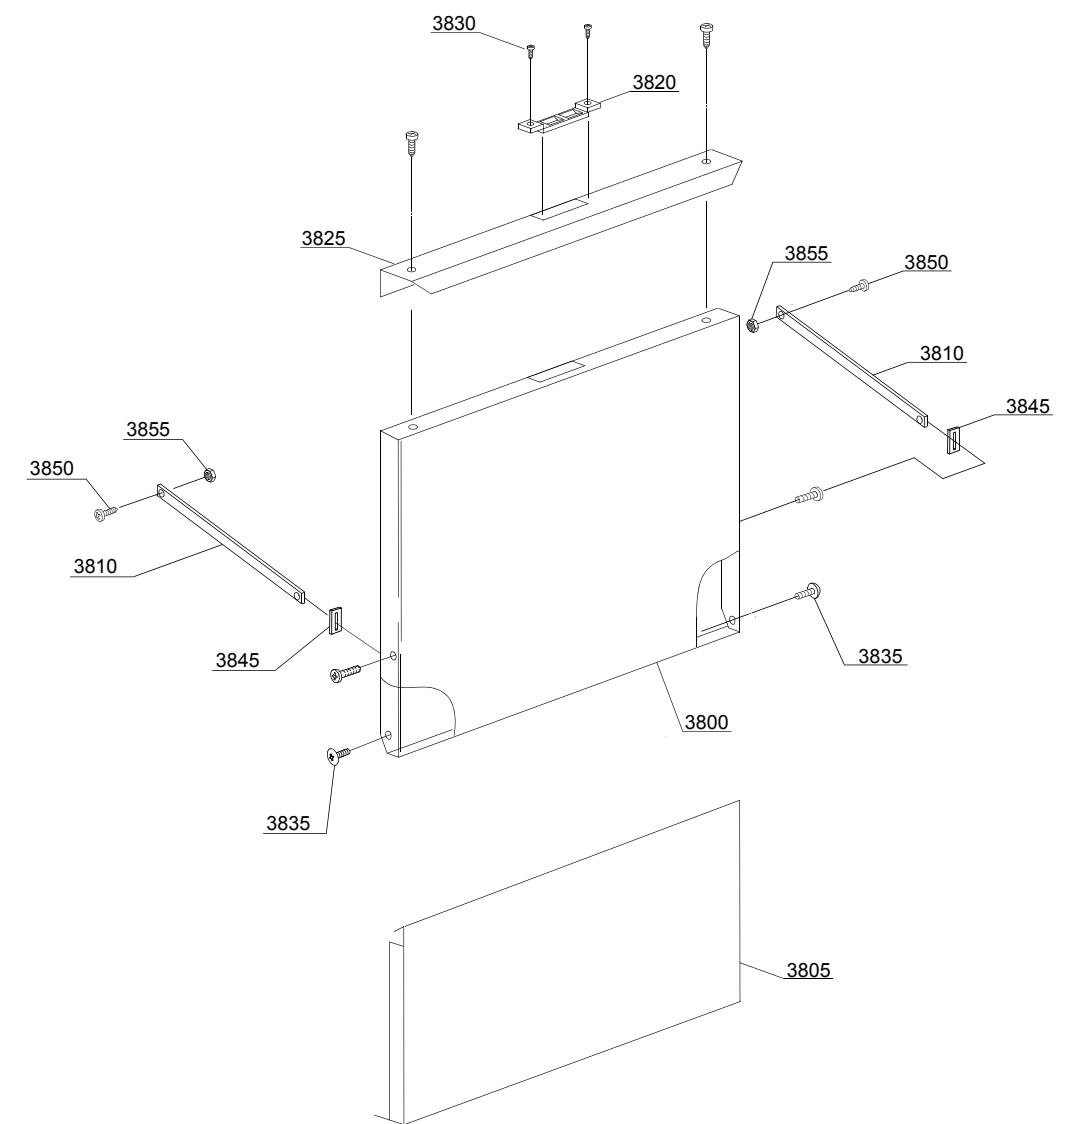


02_103re

06 cleaning & washing

DWD0400

  DWD0400


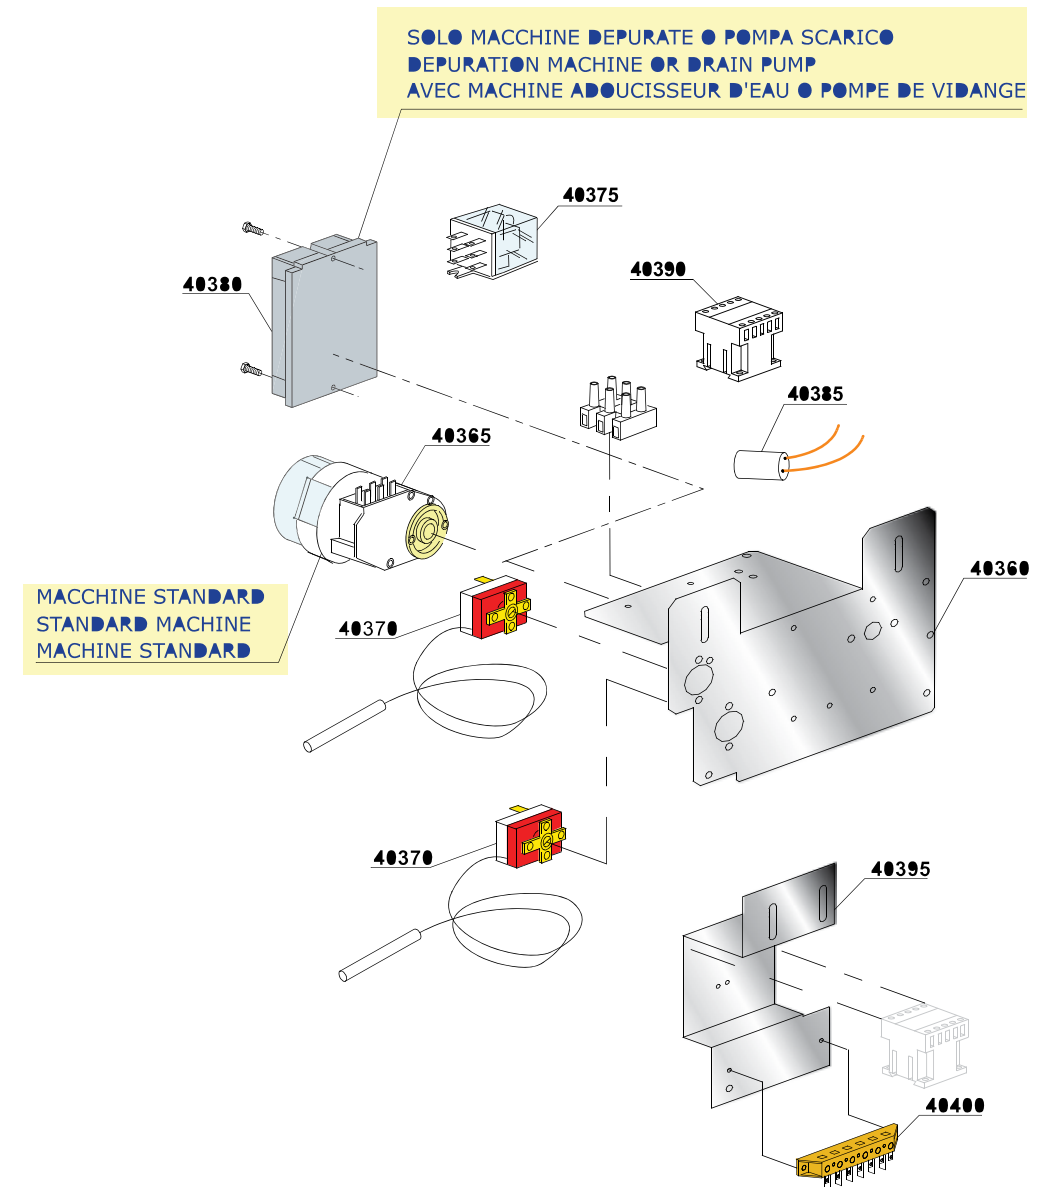
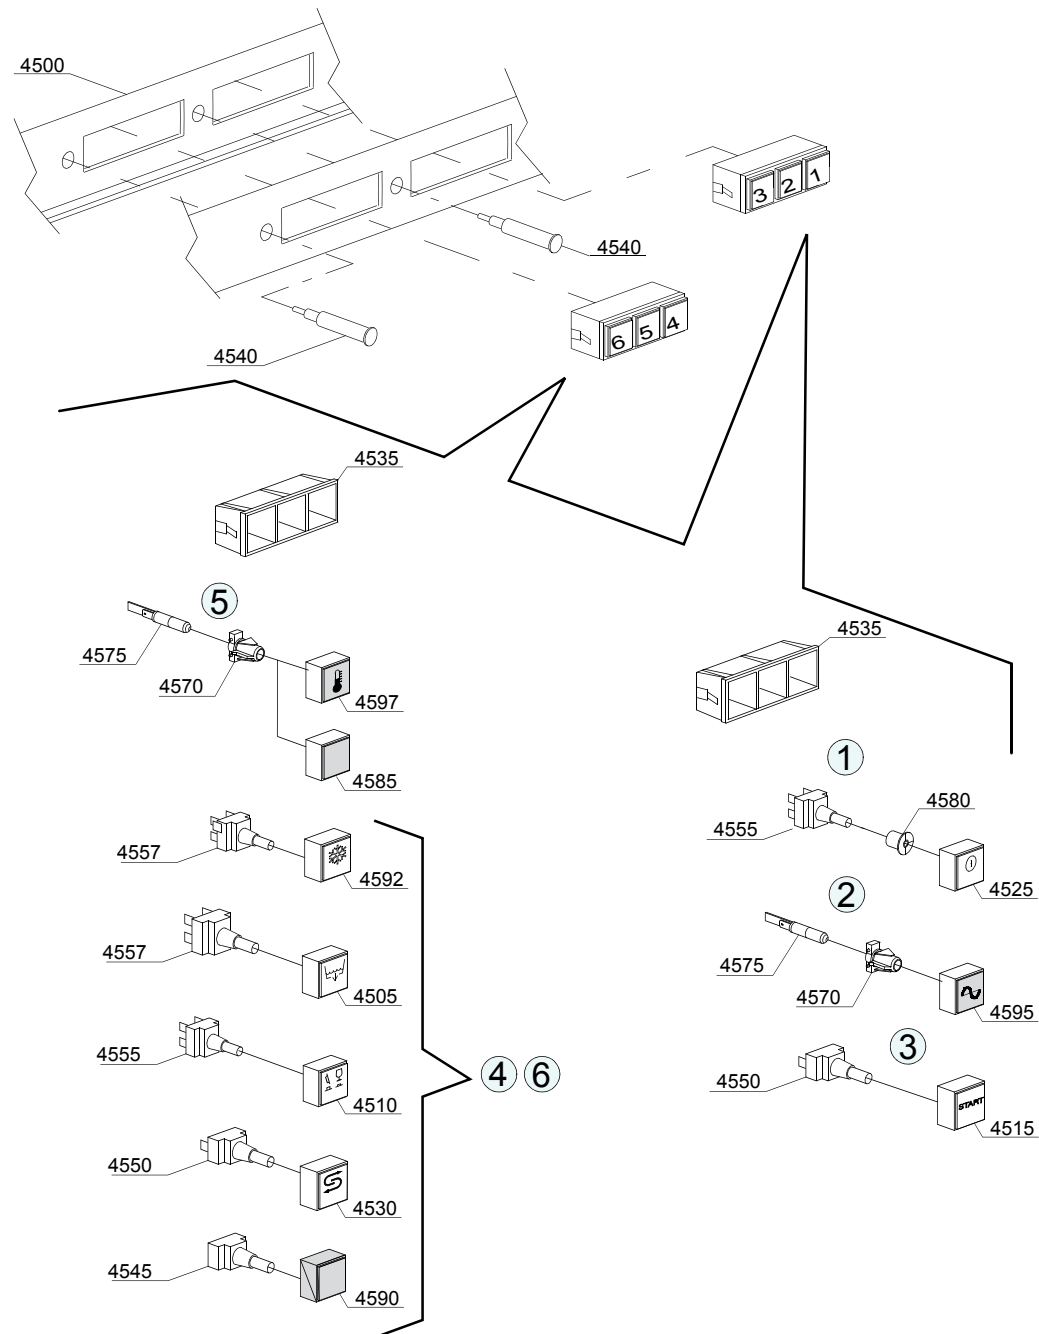


04_043_e


03_001_e

06 cleaning & washing

   DWD0400

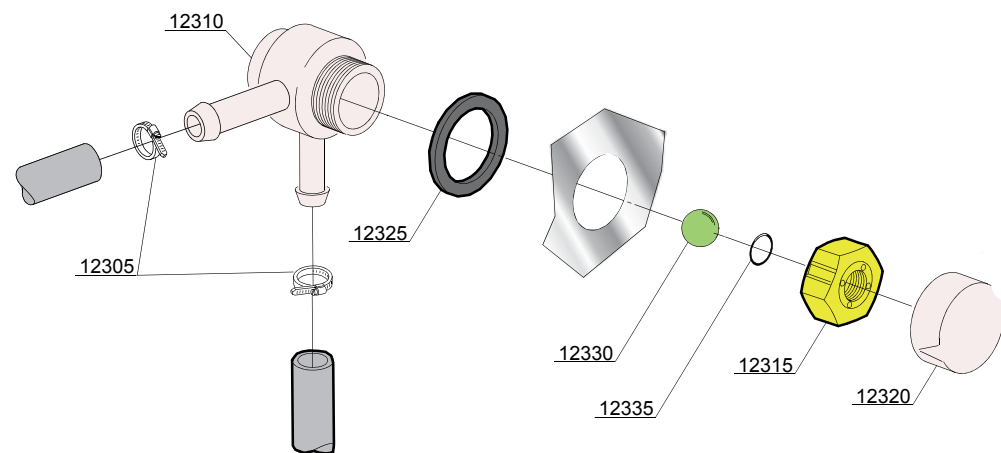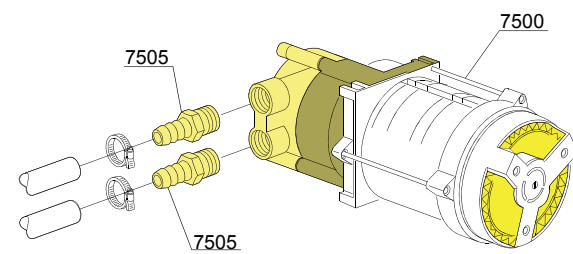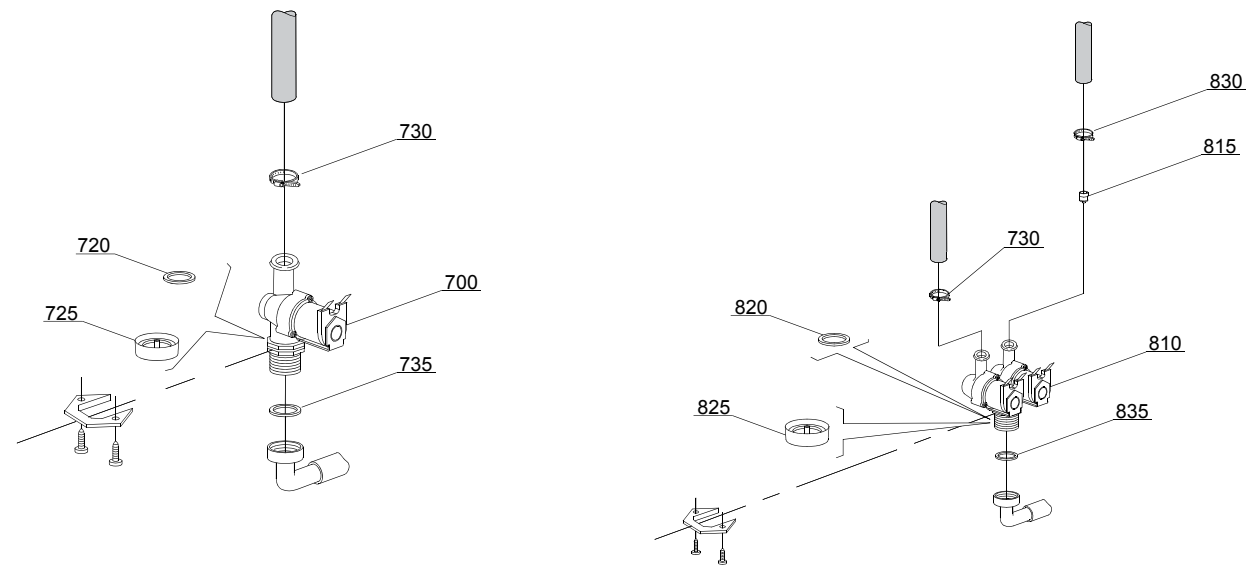



DWD0400

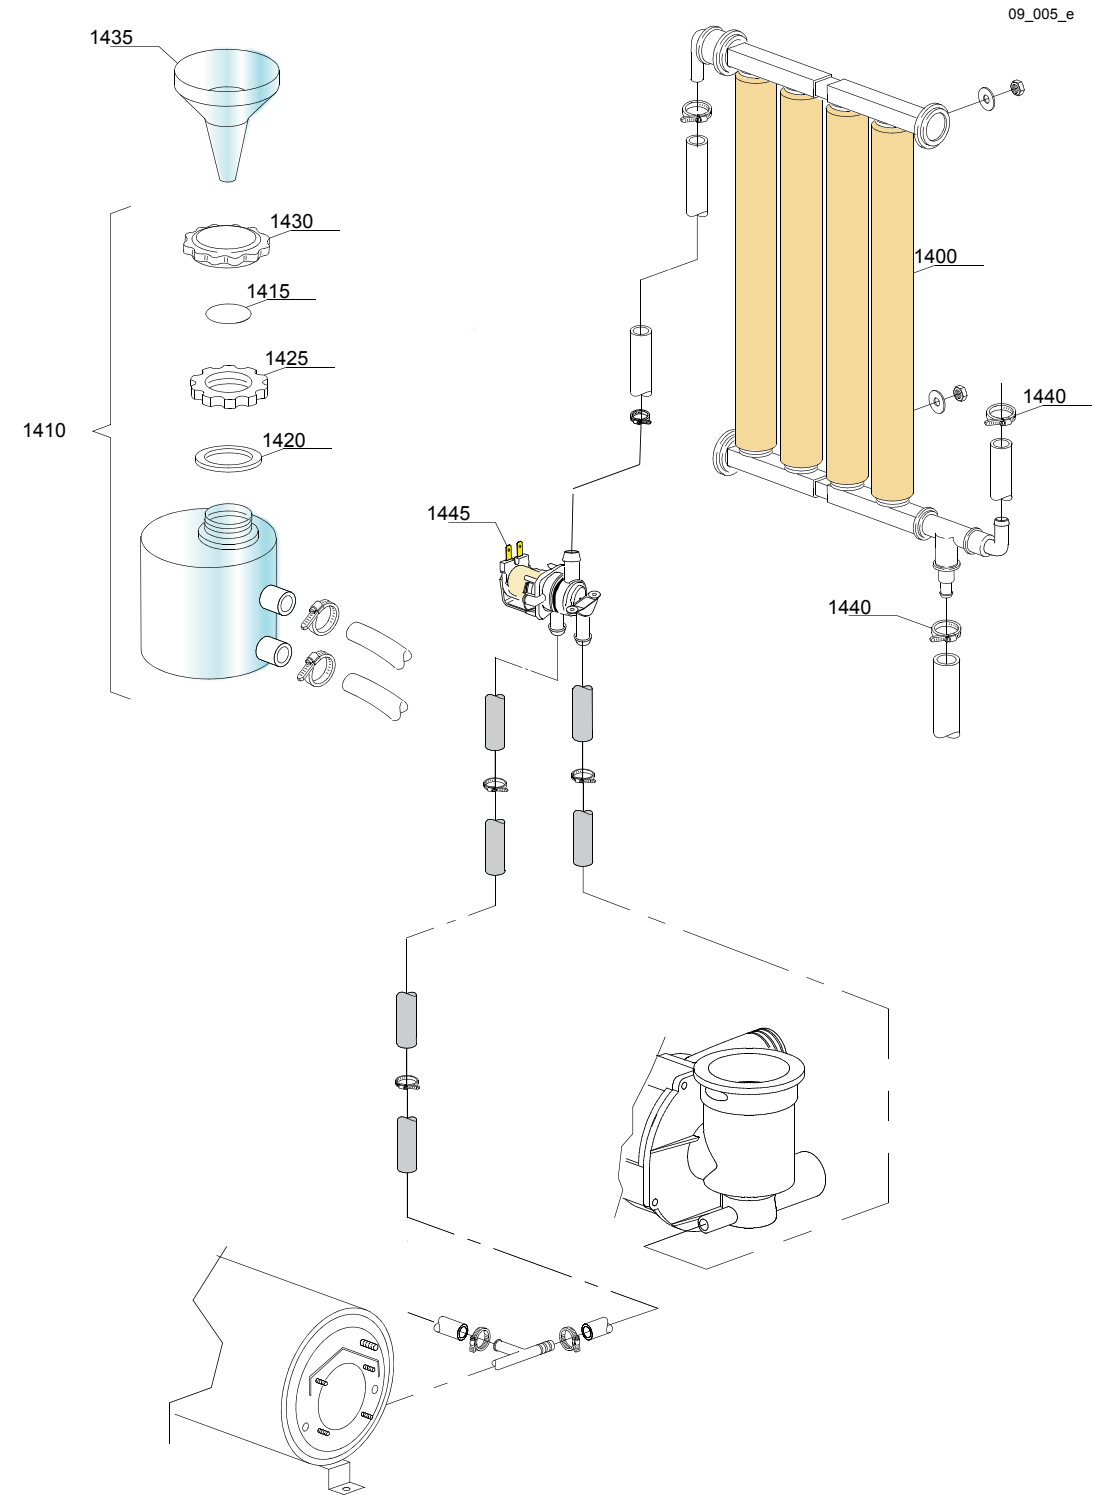 

09_005_e


06 cleaning & washing

  DWD0400

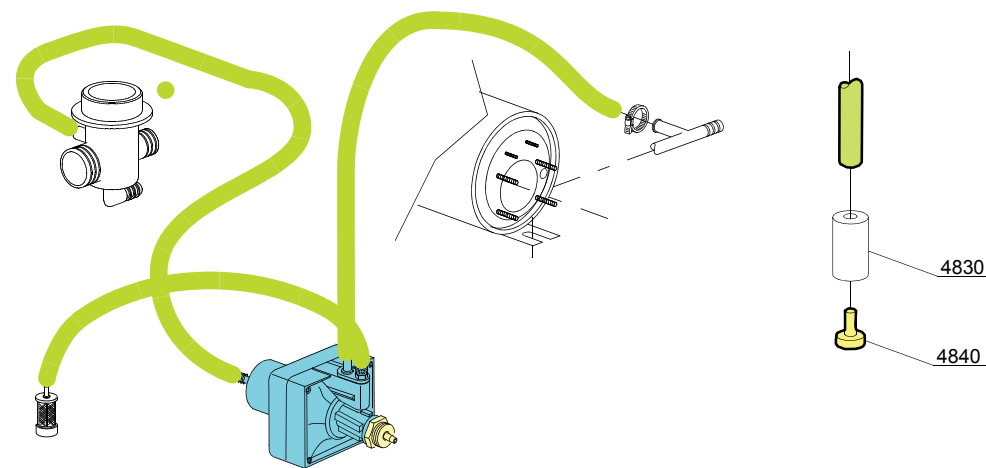
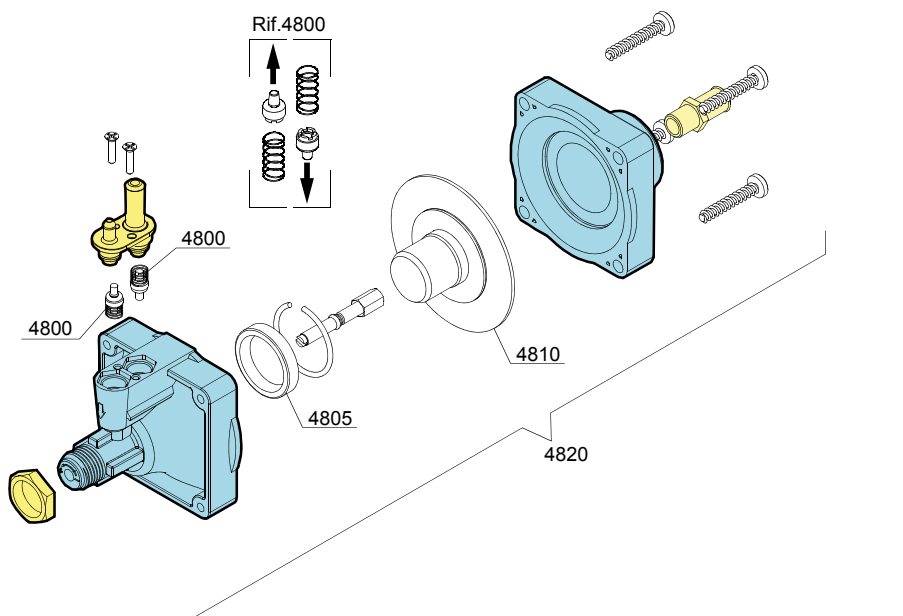


10_006_e

 DWD0400


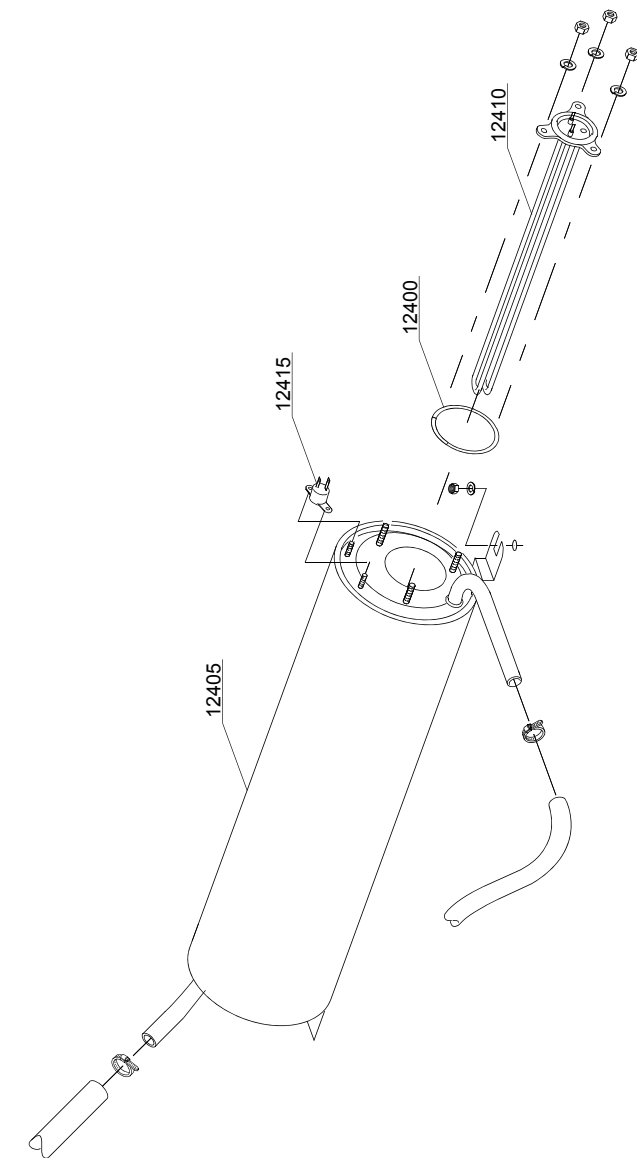


11_007pe

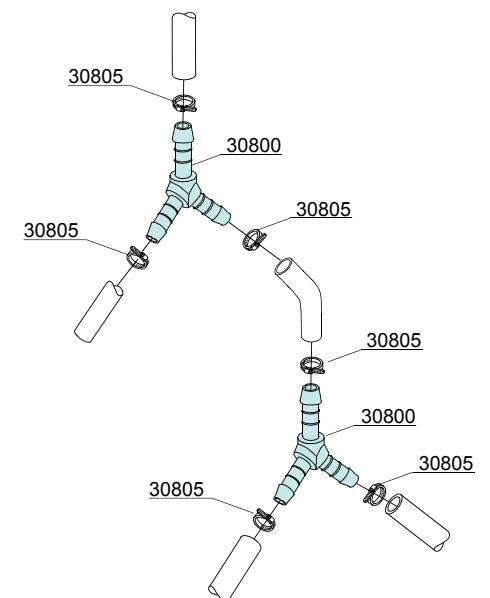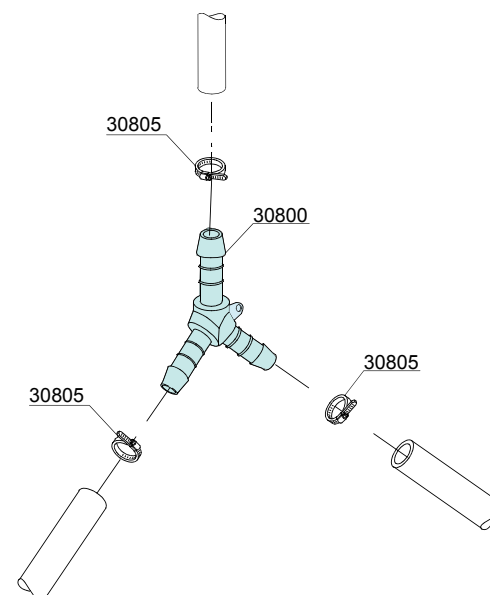  



06 cleaning & washing

  DWD0400

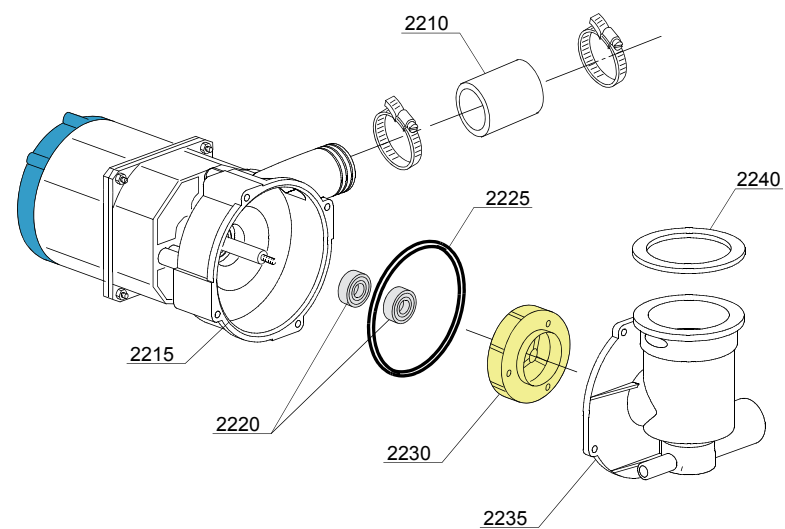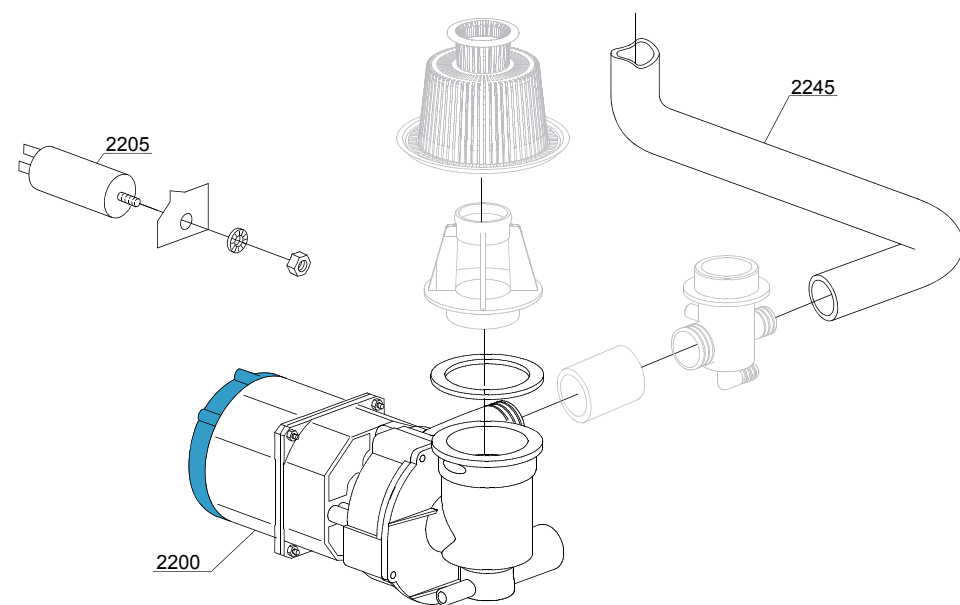


13_132_e

  DWD0400

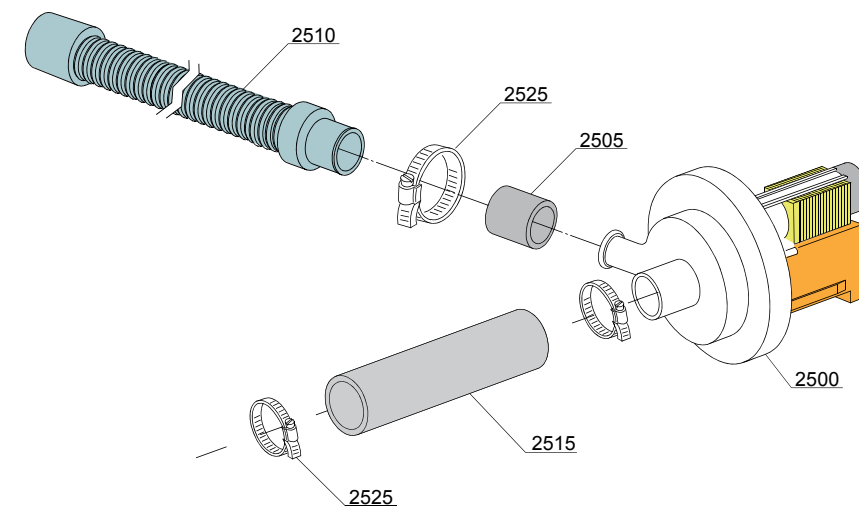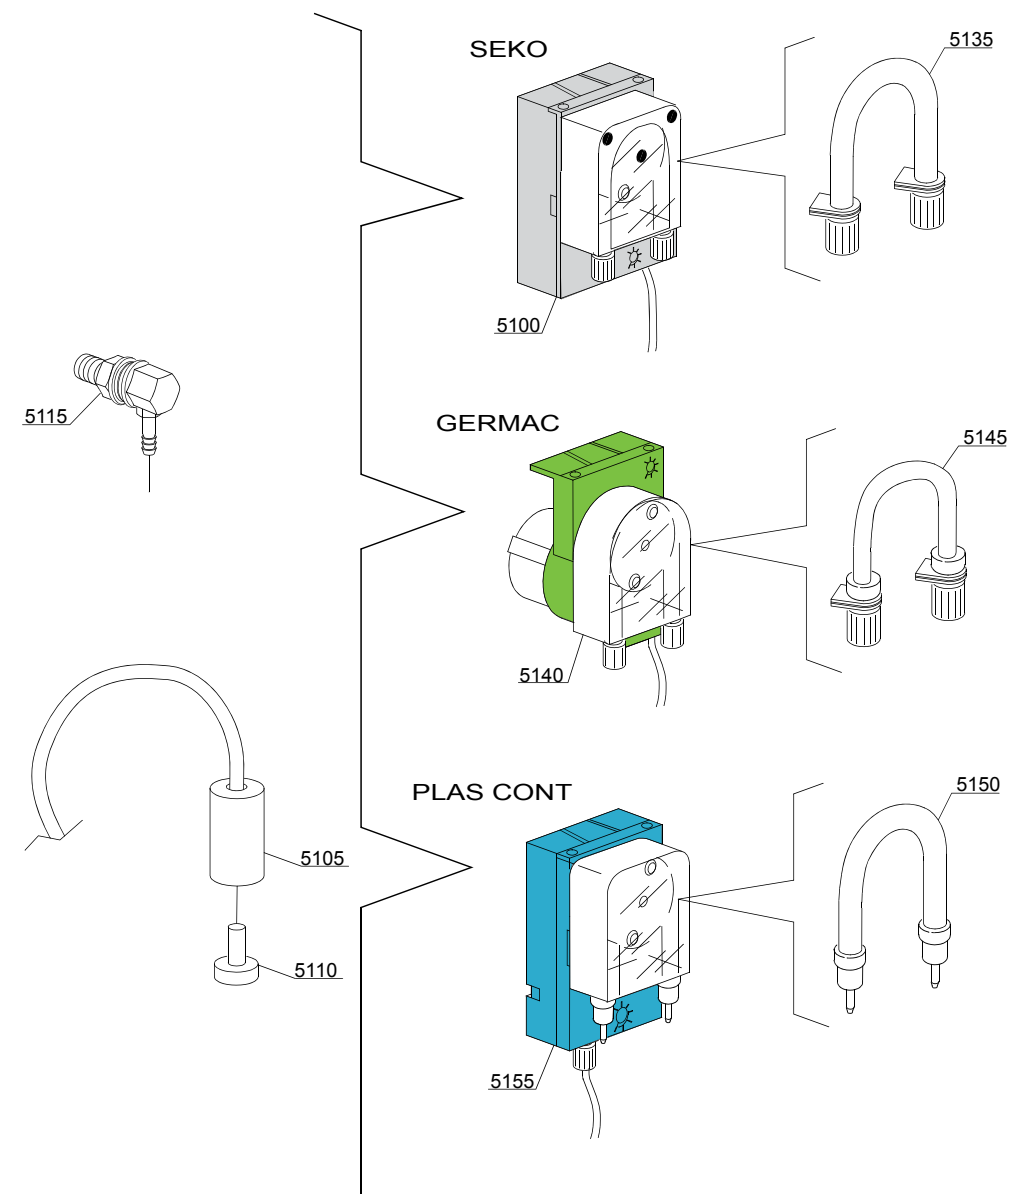


06

 DWD0400

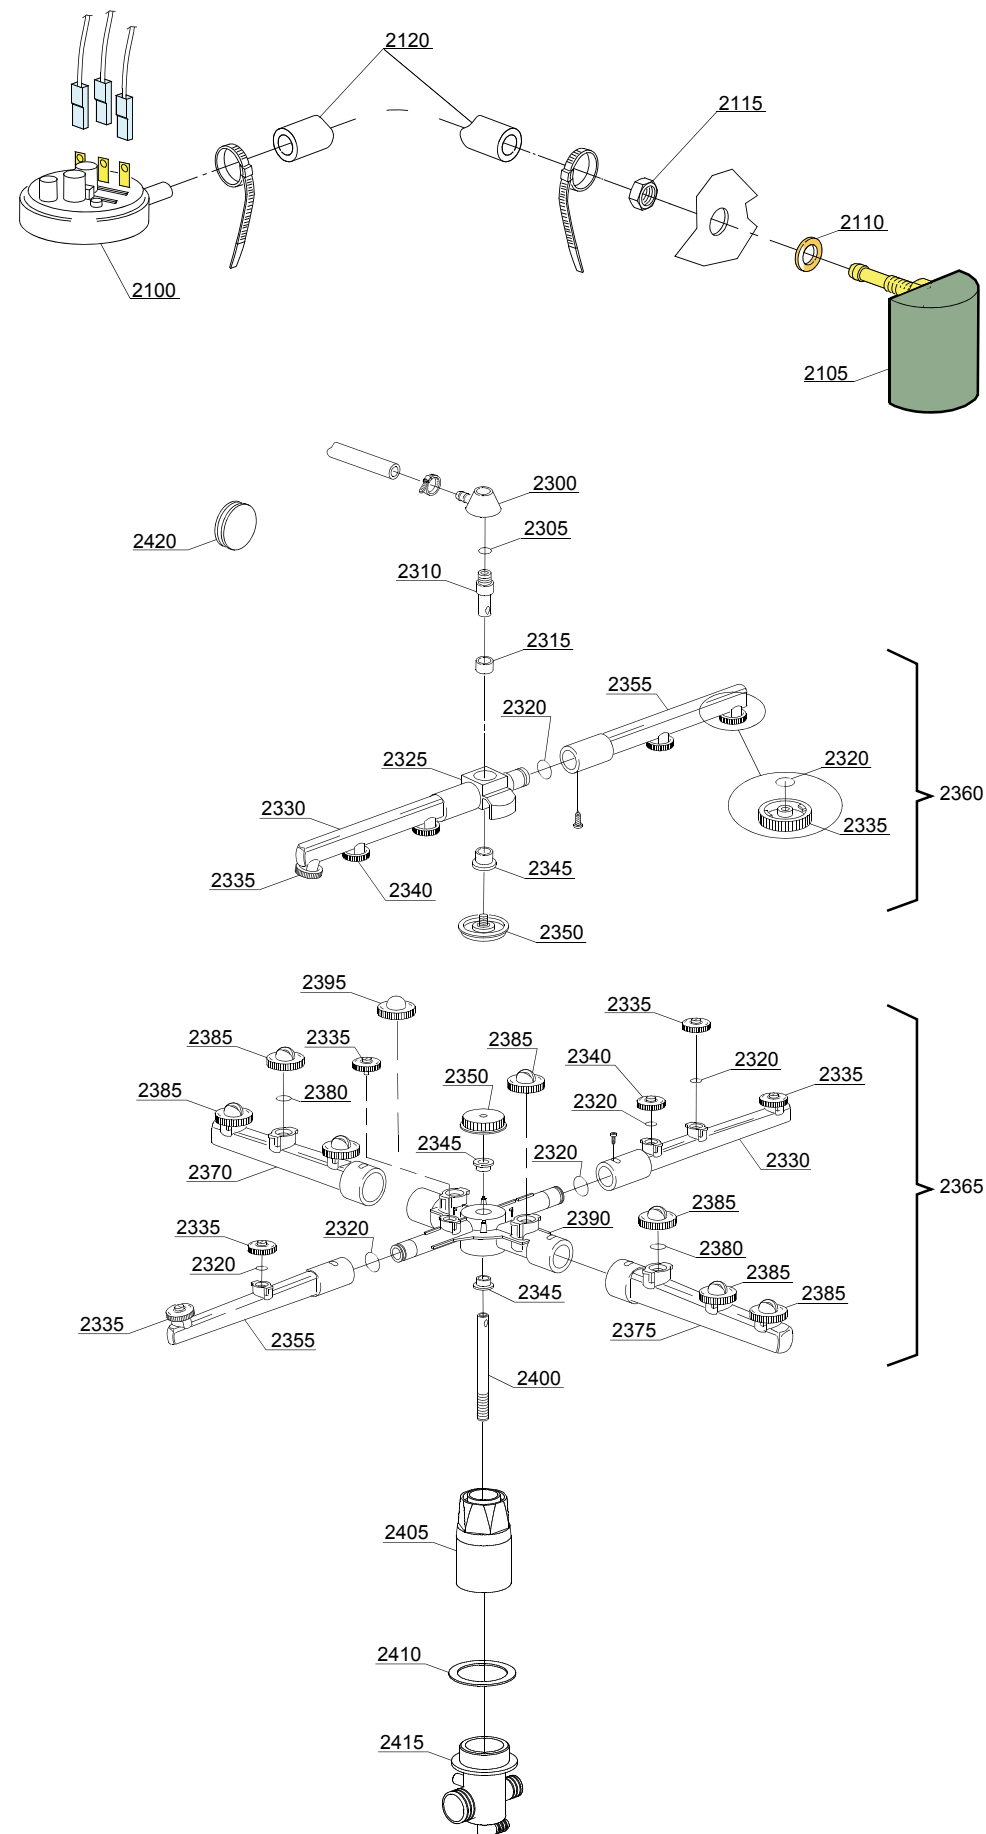

17_139_e

 DWD0400

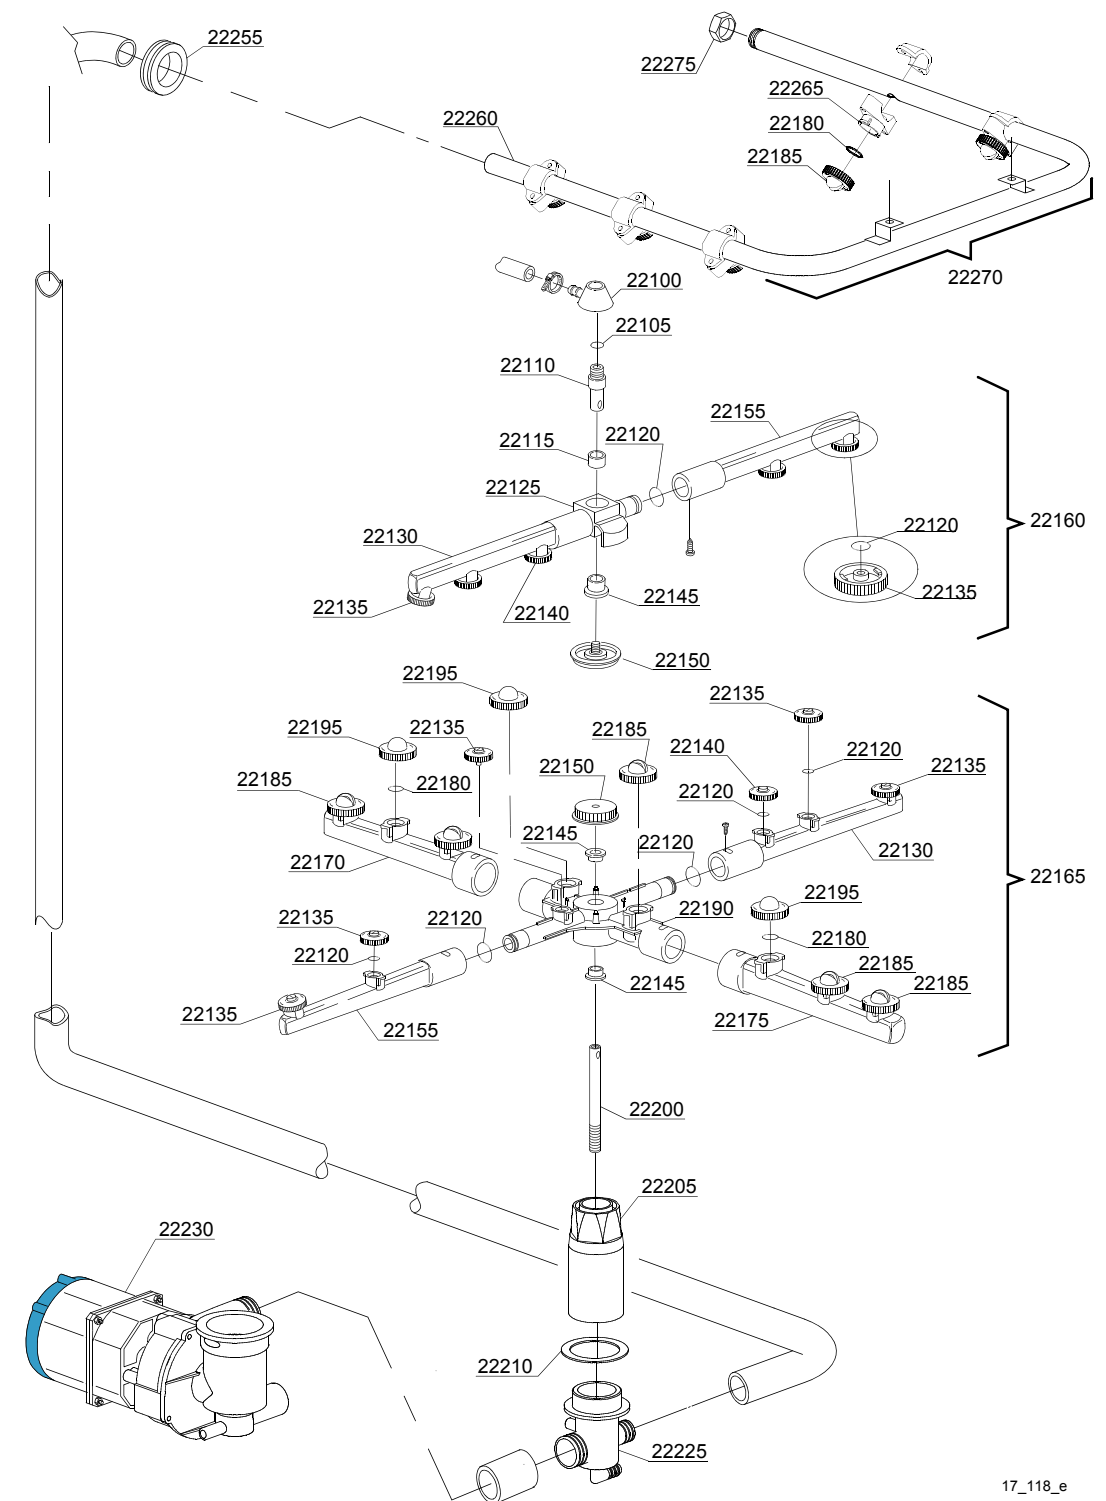

17_118_e

06 cleaning & washing

DWDo400

DWDo400

STOCK CODE	DESCRIPTION	MAN.PART NUMBER	DRAWING REF
XDWD0703	DISHWASHER DIHR-SINGLE SOLENOID VALVE(GS40/50)	DW10703	700
XDWD0706	DISHWASHER DIHR-PRESSURE SWITCH (GS40/GS50)	DW10706/A	2100
XGWD0005	GLASS WASHER DIHR(DERBY/GS40)-UPPER WASH ARM	DW10997	2360
XDWD2065	DISHWASHER DIHR - DOOR JACK ONLY (GS40)	DW150402/D	3820
XDWD5813	DISHWASHER DIHR-UNIPOLAR SWITCH 16A GS50	DW15813	4550
XDWD2055	DISHWASHER DIHR-HT11/GS40/50 16A START SWITCH ON /OFF	DW15812	4555
XDWD4040	DISHWASHER DIHR- PILOT LIGHT(HT11)	DW15826	4575
XDWD0799	DISHWASHER DIHR-3 WAY DOSING DEVICE(11S)	DW10799	4820
XDWD0851	DISHWASHER DIHR-PLASTIC FOOT (GS40/50)	DW10850	11740
XDWD3800	DISHWASHER DIHR - OVERFLOW PIPE [G35] NEW	DW25004	11745
XDWD6035	DISHWASHER DIHR-TANK ELEMENT (GS40)	DW16035/A	12410
XDWD5550	DISHWASHER DIHR-CONVEYOR SAFETY THERMOST	DW15550	12415
XDWD0707	DISHWASHER DIHR-THERMOSTAT (HT11/11S/GS40/50)	DW10707/1	40370
XDWD1951	DISHWASHER DIHR-LOWER WASH GROUP (GS40)	DW540999	
XDWD2001	DISHWASHER DIHR-ON-OFF SWITCH COVER(HT11)	DW89340	
XDWD9347	DISHWASHER DIHR-START SWITCH COVER (GS50	DW89347	
XDWD9957	D/WASHER DIHR - START PUSH BUTTON SUPPORT- GS50	DW89301	